




6015 HO GSR2 LP (Propane) Conversion Check List

When converting to LP (propane), make sure the following steps have been followed (see manual for full details):

- ✓ **Make sure to Order the Stepper Motor Kit (94400999)**
This fireplace is shipped as a GSR unit with remote built in. When converting to propane, you will need to use the propane stepper motor kit (sku 94400999 – package of 4).



- ✓ **Remove and Discard Both NG Manifold Covers and Orifice Gaskets – Install the LP Manifold Covers**
Remove and discard both NG (stock) manifold covers and orifice gaskets (1/4" nutdriver). Install the included LP manifold covers (see illustration below). See manual for details.

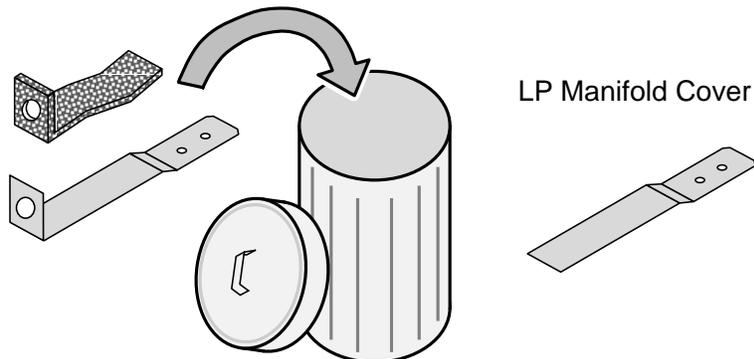

- ✓ **Install the LP Burner Orifices**
Install the two included #53 (DMS) orifices when using LP – see manual for details.
- ✓ **Install the LP Pilot Orifice**
Install the included LP pilot orifice (marked .014LP) – see manual for details.